

Converting Your VHS Tapes to DVD

You can easily convert your VHS tapes to DVD with our Philips DVD Recorder.

Please record to a DVD – R or DVD - RW

Commercially produced VHS tapes may be copy protected and unable to be converted to DVD

Simple VHS to DVD Converting:

1. Turn the recorder on and insert a VHS tape and DVD- R or DVD – RW
2. Press **SETUP** on the remote and use the **arrow keys** to select **General Setting**, then press **OK**
3. Use the **arrow keys** to select **Recording**, then press **OK**. The **Recording** menu will appear on screen
4. Use the **arrow keys** to select **Dubbing Mode**, then press **OK**. The **Selection** menu will appear on screen.
5. Use the **arrow keys** to select **VCR => DVD** on screen, then press **OK**. Press **SETUP** to exit.
6. Press **DVD** then press **REC MODE** to select the desired recording time:

XP – 1 hours (Best quality)

SP – 2 hours

LP – 4 hours

EP – 6 hours

SLP – 8 hours (Poor quality)

7. Press **VCR**, then press => to find the point on the tape where you want to start recording.
Press || when you find the point you want.
8. Press **DUBBING** and the VHS to DVD conversion process will start. Press ■ to stop the conversion.

You must finalize your DVD to allow it to play in other DVD players. Follow these steps to do this:

9. Press **SETUP** and use the **arrow keys** to select **DVD Menu** on screen, then press **OK**
10. Use the **arrow keys** to select **Finalize** on screen, then press **OK**. Select **YES** to begin finalization.

Once the DVD has been finalized, you can eject it and it's ready to play on any DVD player or computer.